



Happy Farmer - (717) 844-5901


daniel@happyfarmer.store



**Scan for
Video Instructions**

MOBILE BROILER COOPS


9 X 24



Box with Hardware & Tarp




Bell Waterer x3

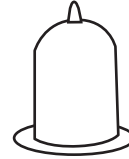


J-Style Feeder x6



26 Gallon Tank




Peek Support x4




Roof Beams x2




Center Roof Beam

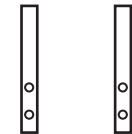


32" Tube x2




Wheel Assembly x4

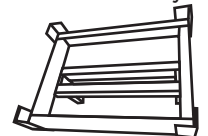


Tank Bracker x1




Straight Roosting Bar x2



Angled Roosting Bars x4

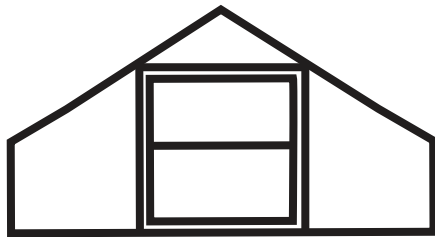

Front Wall

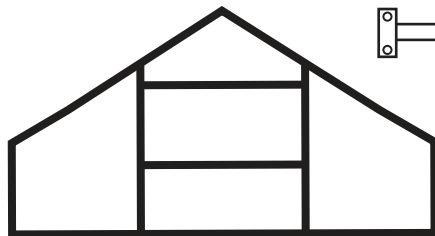

Back Wall



Front & Back Side Walls



Center Side Walls



Once the beams are secured return to the center and tighten the main bolt. Attach the bottom of each support to the appropriate spot on the walls.

Parts Needed: Roof Beam x2, Peek Support x 2, Peek Hardware Bag

ASSEMBLY INSTRUCTIONS

Step 1: Layout coop walls on ground in open area, netting side up as netting should be installed on the inside of the coop. (Suggested 20' x 30' working area). Attach side wall front and back on each side with listed hardware. (See Figure 2). Stand up side walls and front wall. Attach with listed hardware.

Parts needed: Front and Back Walls, Side Wall Front x2, Side Wall Back x2. Side Panel Hardware Bag.

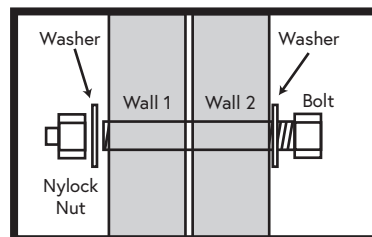


Figure 1

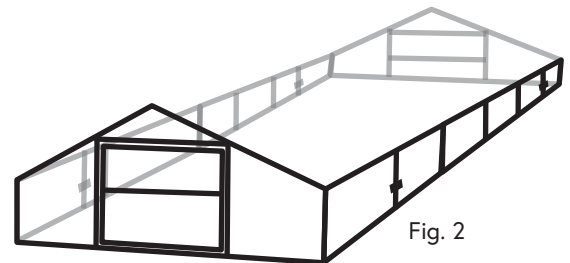


Fig. 2

Best done with two people. Can be done with just one. Stand peak supports together, peak supports can rest on the walls. Use one bolt to secure the beams in the center on either side of where the peak comes together. It is best to leave this center bolt loose for now. With the four roof components loosely held together attach the outer end of the beams to the front and back wall at their peaks.


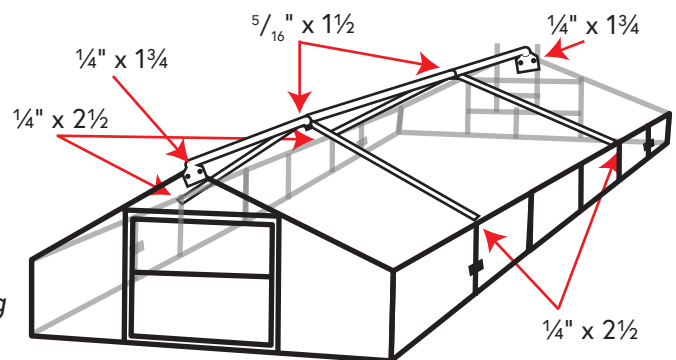


Fig. 3

ASSEMBLY INSTRUCTIONS (CONT.)

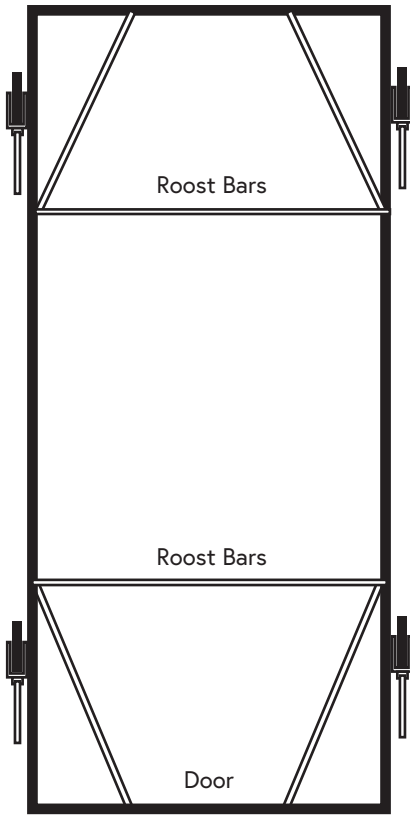

Top View



Figure 4

When the roof is complete lay out the roost bars and attach to the sides. Attach the wheel assemblies to the outside of the coop. Make special note of the plastic washer. This should be between the assembly and the coop side (figure 4).

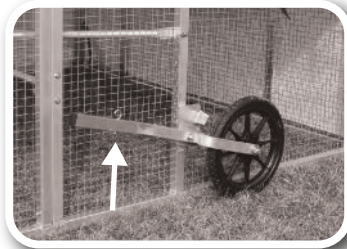


Figure 5

Chain is bolted to side panel. Attach hook to wheel assembly arm as shown in figure 5.

Parts Needed: Straight Roosting Bars x3, Wheel Assembly x 2, Roost Bar Hardware.



32" Tubes bolt onto back panel. Slide tank bracket into top of tubes.



Tank Bracket in place; slides into the 32" tubes attached at rear wall.



Unfold tarp, lay out over coop and attach with bungee cords.

Parts Needed: Tarp, Bungee cords.